

SONY®

# Stereo Headphones

Operating Instructions  
使用説明書  
사용설명서




\* 4 4 6 5 9 0 9 1 1 \* (2)


4-465-909-11(2)

MDR-EX15LP

## How to use / 使用方法 / 사용 방법

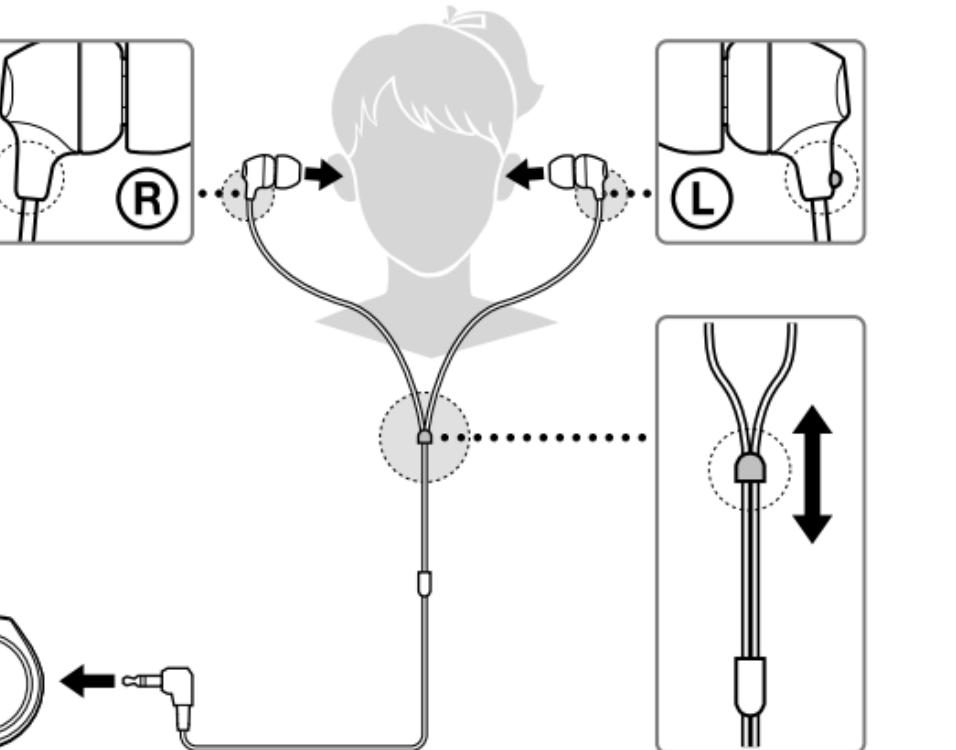

## Earbuds / 耳塞 / 이어버드

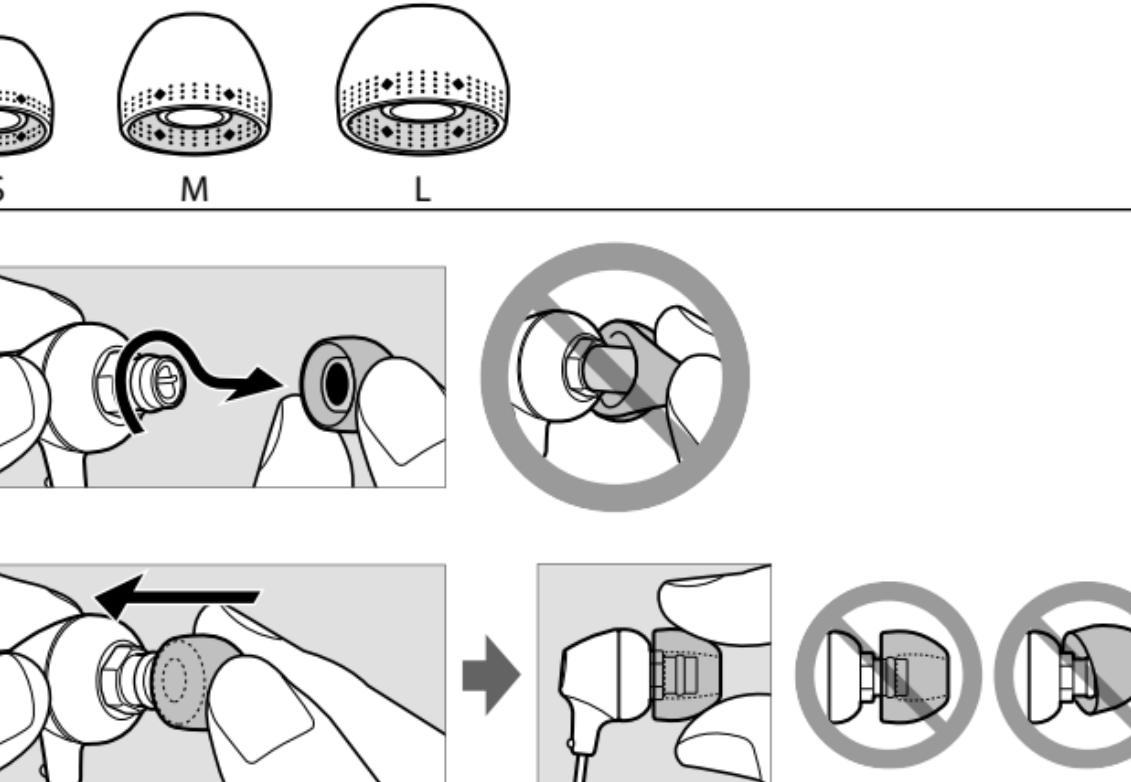

English

Stereo headphones

**Specifications**

**Type:** Closed, dynamic

**Driver unit:** 9 mm, dome type (CCAW)

**Power handling capacity:** 100 mW (IEC\*)

**Impedance:** 16 Ω at 1 kHz

**Sensitivity:** 100 dB/mW

**Frequency response:** 8 Hz – 22,000 Hz

**Cord:** 1.2 m, Litz cord (Y-type)

**Plug:** Gold-plated L-shaped stereo mini plug

**Mass:** Approx. 3 g (without cord)

**Supplied accessories**


Earbuds: S (2 lines) (2), M (3 lines) (attached to the unit at the factory) (2), L (4 lines) (2)

\* IEC = International Electrotechnical Commission


Design and specifications are subject to change without notice.

Optional replacement earbuds can be ordered from your nearest Sony dealer.


**Precautions**

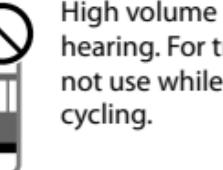

High volume may affect your hearing. For traffic safety, do not use while driving or cycling.

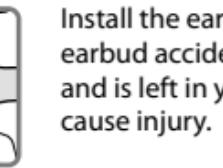

Install the earbuds firmly. If an earbud accidentally detaches and is left in your ear, it may cause injury.

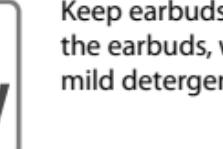

Keep earbuds clean. To clean the earbuds, wash them with a mild detergent solution.

**Note on static electricity**

Static electricity accumulated in the body may cause mild tingling in your ears.

To minimise the effect, wear clothes made from natural materials.


繁體中文

立體聲耳機


**注意事項**



高音量可能會影響您的聽力。為了交通安全，切勿在駕車或騎車時使用耳機。

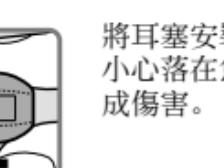

將耳塞安裝牢固。如果耳塞不小心落在您耳朵內，可能會造成傷害。

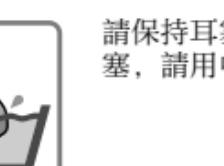

請保持耳塞清潔。若要清潔耳塞，請用中性清潔劑溶液清洗。

**附件**

耳塞: S (2 線) (2), M (3 線) (出廠時安裝至本裝置) (2), L (4 線) (2)

\* IEC = 國際電工委員會  
設計和規格如有變更，恕不另行通知。

可向附近的 Sony 經銷商訂購選購的替換耳塞。

**靜電注意事項**

體內積聚的靜電可能會導致耳朵有輕微刺痛感。穿著天然材料製成的衣服可將此影響減到最少。

한국어

스테레오 헤드폰

**주의사항**



높은 볼륨으로 들으면 청각에 영향을 미칠 수 있습니다. 교통 안전을 위해 운전 중이거나 자전거를 탔을 때에는 사용하지 마십시오.



이어버드를 단단히 끼우십시오. 이어버드가 실수로 떨어져서 귀속에 남기 되면 상처를 입을 수 있습니다.



이어버드를 청결하게 유지하여 주십시오. 이어버드를 청소할 때는 순한 중성세제로 씻어 주십시오.

**정전기에 관한 주의**

신체에 정전기가 누적되면 구가 따끔거릴 수 있습니다. 이러한 현상을 줄이려면 천연 소재로 된 옷을 입으십시오.